

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://opti.nt-rt.ru> || opti@nt-rt.ru

УСТРОЙСТВА СОПРЯЖЕНИЯ ETHERNET/MFC 010

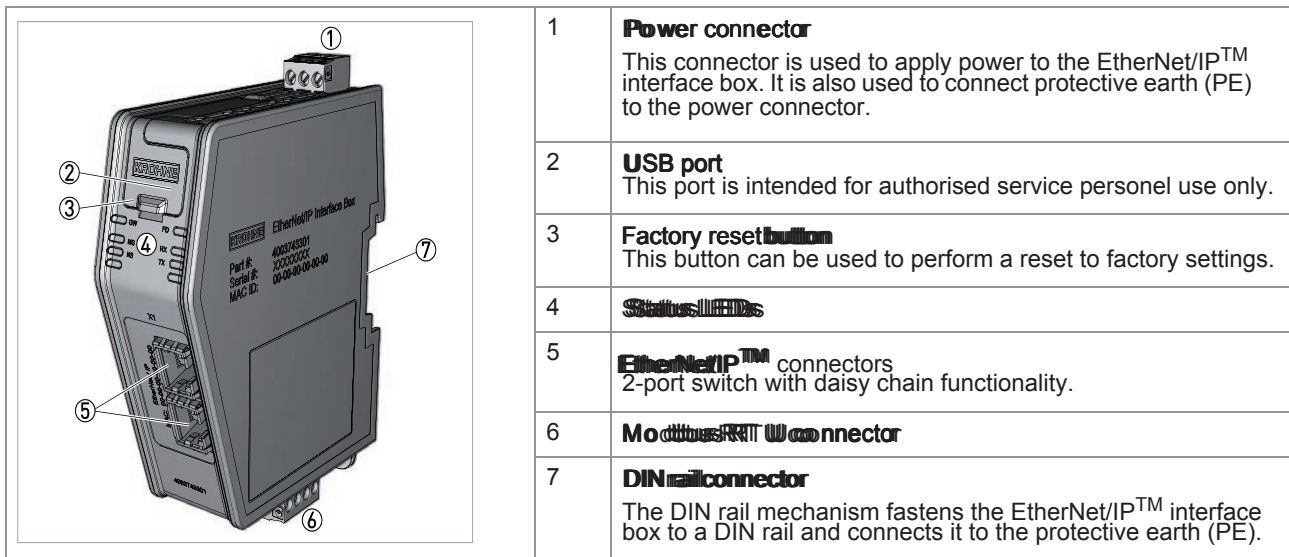


1.1 Seamless EtherNet/IP™ integration for Coriolis mass flowmeters

The EtherNet/IP™ interface box is used to provide a seamless connection between a mass flowmeter and an EtherNet/IP™ network. The EtherNet/IP™ interface box enables the scanner of the EtherNet/IP™ network to control the field device.

No proprietary configuration software is needed. All necessary configuration can be made via the built-in web interface or engineering tool using the EDS.

EtherNet/IP™ is many times faster than most other established protocols used in process automation today. This allows unequalled fast exchange of process data and virtually instantaneous configuration of the field device.



Highlights

- Integrated switch for line and ring topology
- Support of Device Level Ring (DLR) for redundancy
- Password protected web server to facilitate configuration and diagnosis of the device
- Electronic Data Sheet (EDS) available for convenient deployment
- Add-On Instruction (AOI) available for use in Rockwell environments

Industries

- Food & Beverage

1.2 Features

The EtherNet/IP™ interface box supports the following features:

- 2 EtherNet/IP™ ports with
 - Support for Beacon-based DLR and linear network topology
 - Galvanically isolated bus electronics
 - 10/100 Mbit, full/half duplex operation
- Choice of two pre-defined sets of input data
- Modbus RTU port with configurable termination and polarisation
- Web server with field device specific user interface
 - Status information
 - Access to all parameters of the flowmeter
 - Calibration procedures
 - Settings page
 - Diagnostic information

1.3 Communication with the field device

The EtherNet/IP™ interface box communicates via Modbus RTU Protocol with the attached field device.

The following parameters can be configured:

- Modbus slave address of the field device
- Baud rate
- Parity
- Termination and polarization
- Write timeout
- Disconnect time

After power up, the EtherNet/IP™ interface box tries to connect with the field device until the connection can be established. As long as no connection is established LED FD is flashing green. If a compatible field device is connected, LED FD will switch to green. Otherwise LED FD will be flashing red.

The EtherNet/IP™ interface box can be used with the following field devices:

- OPTIMASS 1010 C
- OPTIMASS 3010 C
- OPTIMASS 7010 C
- OPTIGAS

If the connection is disturbed or interrupted longer than the specified disconnect time, the EtherNet/IP™ interface box will shut down the connection and try to reconnect.

When the baud rate, the parity or the Modbus slave address is changed and a device is connected, the change will be performed in the field device. Afterwards the connection will be re-established with the changed parameters.

1.4 Connections

1.4.1 Class 1

General details

Class 1 connections are used to transfer I/O data and can be established to instances in the assembly object. Each class 1 connection will establish two data transports - one consuming and one producing. The heartbeat instances can be used for connections that shall only access inputs. Class 1 connections use UDP transport.

- Total number of supported class 1 connections: 4
- Supported API: 2...3200 ms
- T → O connection type: Point-to-point, Multicast
- O → T connection type: Point-to-point
- Supported trigger types: Cyclic, CoS

Connection types Exclusive-

Owner connections

- Process values without configuration
- Process values with configuration
- Extended process values without configuration
- Extended process values with configuration

Input-Only connections

- Input Only
- Input Only Ext

Listen-Only connections

- Listen Only
- Listen Only Ext

1.4.2 Class 3

The EtherNet/IP™ interface also supports class 3 connections.

General details

Class 3 connections are used to establish connections towards the message router. Thereafter, the connection is used for explicit messaging. Class 3 connections use TCP transport.

- No. of simultaneous class 3 connections: 16
- Supported API: 2...10000 ms
- T → O Connection type: Point-to-point
- O → T Connection type: Point-to-point
- Supported trigger type: Application

2.1 Technical data

Measuring system

Description	<p>The EtherNet/IP™ interface box is used to provide a seamless connection between a mass flowmeter and an EtherNet/IP™ network. The EtherNet/IP™ interface box enables the scanner of the EtherNet/IP™ network to control the field device.</p> <p>No proprietary configuration software is needed. All necessary configuration can be made via the built-in web interface or engineering tool using the EDS.</p>
Network settings	DHCP: On
	Hostname: <none>
	Port 1 Ethernet link speed: Auto
	Port 2 Ethernet link speed: Auto

Operating conditions

Temperature	Operating temperature: -20...+70°C / -4...+158°F
	Storage temperature: -20...+85°C / -4...+185°F
Relative humidity	The product is designed for a relative humidity of 5% to 95% non-condensing.

Installation conditions

Mounting	The EtherNet/IP™ interface box can be physically installed by mounting it onto a DIN rail.
Dimensions	L x w x h [mm]: 101 x 35 x 109.8 (without connector); L x w x h [inch]: 4 x 1.4 x 4.3 (without connector)
Weight	144 g / 0.3 lb (with connector)

Electrical connection

Supply voltage	The EtherNet/IP™ interface box requires a 24 V (-60%/+25%) DC power source.
Power consumption	The typical power consumption is 150 mA at 24 V.
Protective earth (PE) requirements	<p>In order to achieve proper EMC behaviour, the product must be connected to protective earth (PE) via the DIN rail connector.</p> <p>If the DIN rail cannot be used, PE must be connected to the power connector. We cannot guarantee proper EMC behaviour unless these PE requirements are fulfilled.</p> <p>Note: According to the EtherNet/IP™ specification, the shield of each RJ-45 connector is not directly connected to PE. There shall however be a low impedance connection of infrastructure components, such as patch panels, to PE.</p>

2.2 Field device connector

The connector used to connect to the field device is located at the bottom of the EtherNet/IP™ interface box.

Terminal	Description
PE	PE/shield
A	RS-485 A line (+)
B	RS-485 B line (-)
GND	RS-485 signal ground

- *Proper grounding is mandatory for reliable operation of the device.*
- *Shield and signal ground shall not be interconnected.*

2.3 Power connector

Terminal	Description
+	+24 VDC
-	Supply ground
Earth symbol	PE (protective earth)

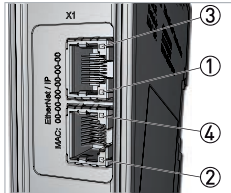
MFC 010 power supply with 12 VDC is needed!

The terminal tightening torque must be between 0.5...0.8 Nm / 5...7 lbs-in.

2.4 Ethernet connectors

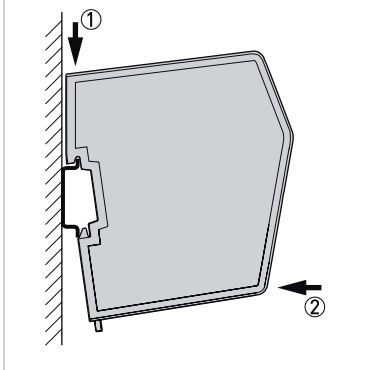
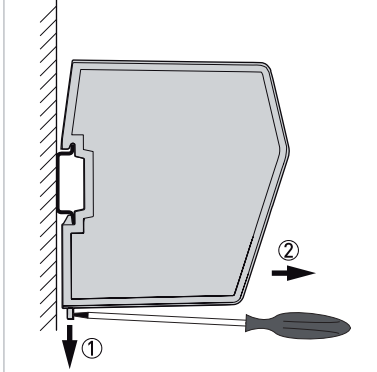
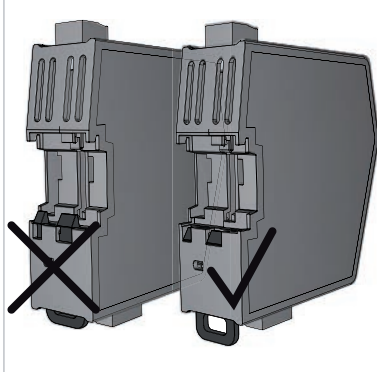
The two standard Ethernet connectors (RJ45) are marked as "X1" and are located on the front of the EtherNet/IP™ interface box.

Properly shielded cables shall be used for reliable operation of the device.

	LED	Description
	1	Not connected
	2	Not connected
	3	Link/Activity LED (port 1)
	4	Link/Activity LED (port 2)

3.1 Mounting the EtherNet/IP™ interface box

The EtherNet/IP™ interface box can be physically installed by mounting it onto a DIN rail.

	<p>DIN rail mounting</p> <p>Make sure the DIN rail fastening mechanism on the back of the module is in a fixed and closed position, i.e. pushed all the way up.</p> <p>To mount the module, first hook it on to the DIN rail (①), then push it against the DIN rail to make it snap on (②).</p>
	<p>DIN rail unmounting</p> <p>To unmount the module, a screwdriver is needed. Use the screwdriver to push the fastening bracket on the back of the module down until it locks in a fixed and open position (①).</p> <p>Then unhook the module from the DIN rail (②).</p>
	<p>Fixed and closed position</p> <p>Do not leave the module with the DIN rail fastening mechanism in a fixed and open position. This may eventually wear the fastening mechanism out so it cannot be used efficiently.</p> <p>Be sure to push the DIN rail fastening mechanism back into the fixed and closed position after unmounting the module.</p>

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курган (3522)50-90-47
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12

Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саранск (8342)22-96-24
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35

Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Улан-Удэ (3012)59-97-51
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://opti.nt-rt.ru> || opti@nt-rt.ru